


Instructions

STEP 1




Cut or break the sprue at A before installing handrails.

STEP 2

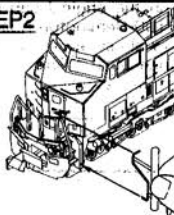

Holding the sprue, fully insert handrail into hole at step and nose.

STEP 3

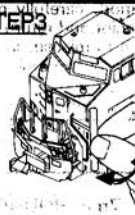

Once handrail is firmly pressed into place, detach sprue with slight back and forth movement. Sprue will snap cleanly from handrail. (Sprue can also be cut from handrail with hobby knife.)

921310~
Body Shell Undec

Sand Fill Hatches

934030
Exhaust Stack GE DASH9

920011~
Air Horn 3 Chime

920110
Glass Set
DASH9

Cab

Front Light Duct

934020 Snow Plow
Light Cover

923090
Coupler Set
Rapido Long Body Mt Hood Unit

925090
Mechanism
(W/O Trucks)

901010
Hex Nut

902010
Insulating Bushing

926030
Motor Large Hood Unit

Motor Saddle

924071~
Fuel Tank

929141~
Truck Assembly

932020
Geared Wheel Assembly

Hood

Side Window

Windshield
Glass

Radiator

Rear
Numberboard

922071~
Handrail/Walkway

933021~
Brake Wheel
DASH9

Sill Unit

Rapido Long Body
Mt Coupler

Body Mt Coupler Spring

Body Mt Coupler Latch

928040
Lights Circuit Board

Main Frame-Right

927010
Brush Set

926510
Worm,
Bearing & Joint Set

Bearing Retainer

Main Frame-Left

900040
Screw

930040
Double Gear

931030
Idle Gear

Truck Pick Up Shoe

Gear Case

Truck Frame

