



■How to install the optional Headlight PCB

To install the optional headlight unit into either of the two Water Tenders, please follow the instructions below:


①Remove the entire coupler box on both sides of the Tender. The whole piece should be removed without disassembly.

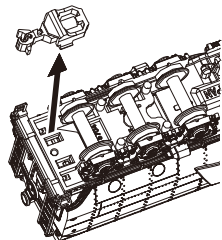


②Rotate the trucks to the side – they will automatically disengage from the underbody and come off

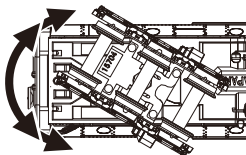

③ Remove the floor cover by pushing in the direction of the arrow on the small tab near it.

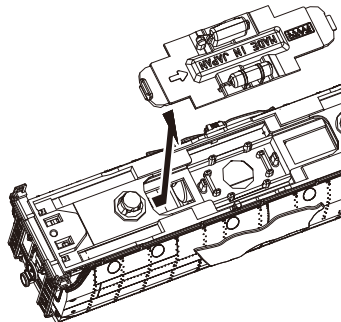

④Install the contact springs with their flat side pressed against the car's contact strips. Install the Headlight PCB- you can orient it in either direction depending on which side of the car you wish to be illuminated.

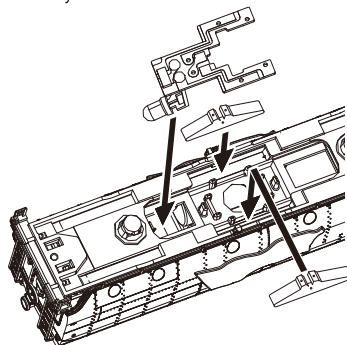

⑤ Reverse these steps in order to reassemble the floor cover, trucks, and coupler box. When reassembling the trucks, the cylinder details should be on the side nearest the center of the car.

■Installation of Magnetic Trip Pins in Coupler

Push straight leg of Pin into oval shaped hole in Knuckle, noting the fit of the flattened shape of the Trip Pin. The Pin should clear the top of the rail by 0.010" (0.25mm) to prevent its snagging on switches or grade crossings.



LIMITED WARRANTY

KATO U.S.A., INC. warrants that this product will be free from defects in material and workmanship for a period of sixty (60) days from the date of purchase. If this product fails during the warranty period, carefully pack the assembled item in the original carton, together with the dated sales receipt, and return to: KATO U.S.A., INC. 100 Remington Road, Schaumburg, IL 60173. Defects due to misuse, improper maintenance and/or abuse are not covered by this warranty. Items that have been modified by the modeler or anyone other than an authorized KATO repair person are not covered by the warranty. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.